

THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-VFR400-NC30-1-GBR / Secondary Clutch Cover Part No. EC-VFR400-NC30-2-GBR /  
Secondary Pulse Cover Part No. EC-VFR400-NC30-3-GBR




**SECONDARY ALTERNATOR COVER PART NO. EC-VFR400-NC30-1-GBR**

1. Remove fairing panel.
2. Remove 4 existing bolts from the stock Alternator cover, shown as position Bolt 1, 2, 3 & 4
3. Place the Secondary Alternator Cover over the stock cover.
4. Assemble 4 replacement M6X35HHF bolts loosely in the correct position as shown.
5. Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations.  
**DO NOT OVERTIGHTEN.**
6. Replace fairing.



**SECONDARY CLUTCH COVER PART NO. EC-VFR400-NC30-2-GBR**

1. Remove fairing.
2. Remove 4 existing bolts from the stock Clutch cover, shown as position Bolt 1, 2, 3 & 4.
3. Place the Secondary Clutch Cover over the stock cover.
4. Loosely assemble 4 x M6X35HHF replacement bolts supplied.
5. Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations.  
**DO NOT OVERTIGHTEN.**
6. Replace fairing.

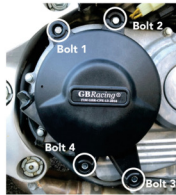

**SECONDARY PULSE COVER PART NO. EC-VFR400-NC30-3-GBR**

1. Remove fairing.
2. Remove 3 existing bolts from the stock Pulse cover, shown as position Bolt 1, 2, & 3.
3. Place the Secondary Pulse Cover over the stock cover.
4. Assemble 2 x M6X45HHF & 1 x M6X35HHF replacement bolts loosely in the correct position as shown.
5. Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations.
6. Refit fairing.

